

Tab 5

USING YOUR HUEBA IN EMERGENCY SITUATIONS



1 Remove nose clip from suit and place it on your nose.

2 Grasp the second stage regulator on left shoulder.

3 Pull second stage regulator clear of its dustcover and the hose clear from suit Velcro.



HUEBA:

E452 SURVIVAL SUIT

USING YOUR HUEBA IN EMERGENCY SITUATIONS



4 Place second stage regulator in your mouth and form a seal, using your lips on the outside of the mouthpiece. Support the demand valve in your mouth by lightly gripping it with your teeth on the inside of the mouthpiece.

5 When underwater blow forcefully through the mouthpiece to clear the water from the demand valve. If you are unable to clear the second stage regulator with a forceful breath you can use the purge button. The use of the purge button should be kept to a minimum, because it decreases the endurance of the unit.




6 Once you have cleared the unit you can inhale air from the system while completing your escape. Remember to breath both in and out only through your mouth.




7 Remember to breath out on the way to the surface.






HEBA 2300
POS 0005

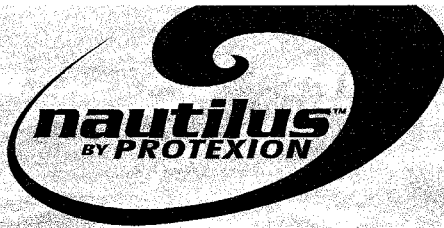

E452 SURVIVAL SUIT

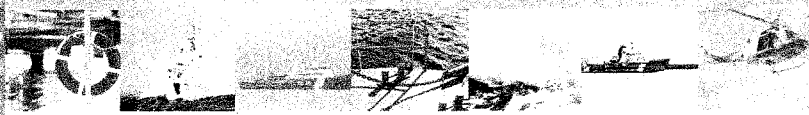

HUEBA PRE FLIGHT CHECKLIST

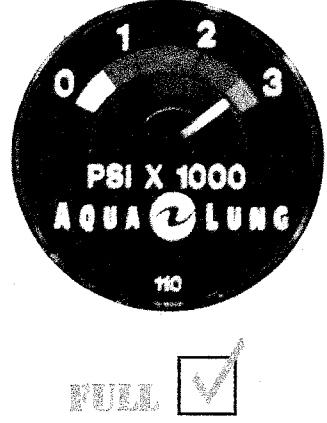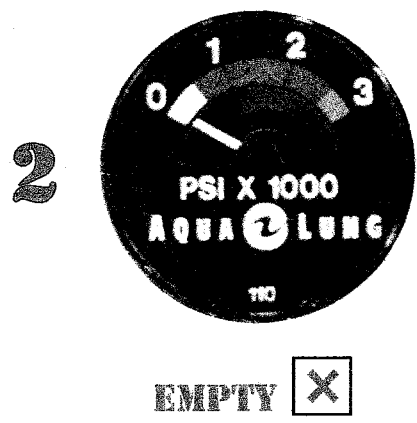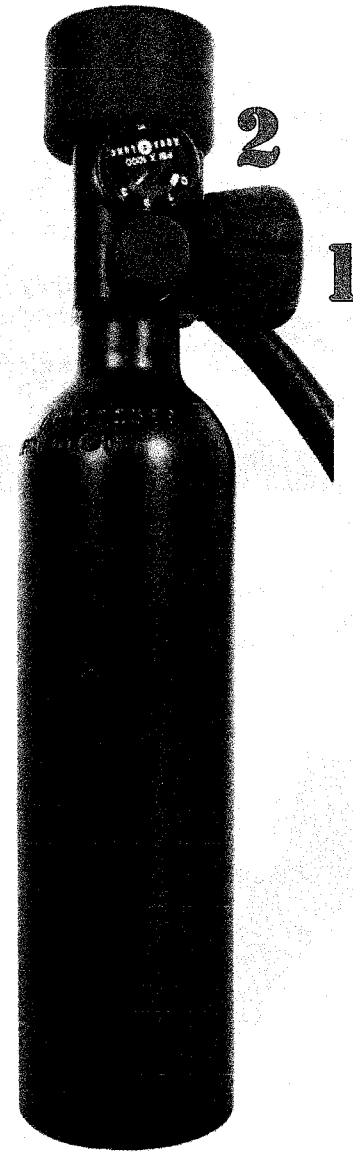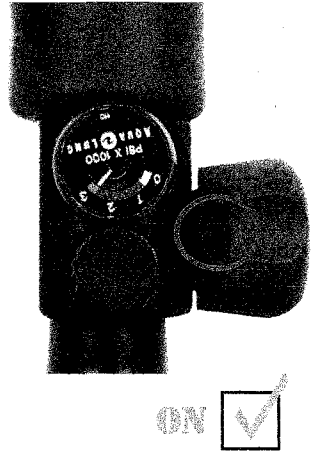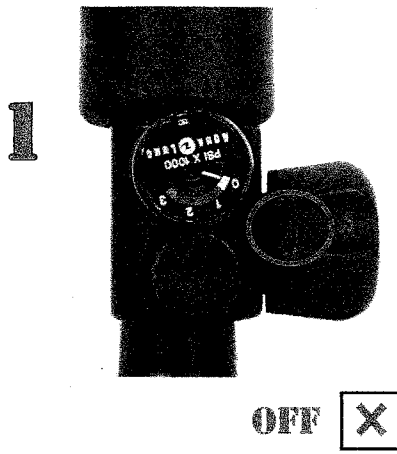

**IF THE HUEBA FAILS ANY OF THE ABOVE CHECKS OR THERE IS ANY DOUBT
WITH THE CONDITION OR FUNCTION OF THE HUEBA
DO NOT USE
AND BRING TO THE ATTENTION TO THE STAFF AT THE HELIPORT OR HELLY ADMIN**